



Item	Part No.	Description
1	CPS01.01	Leg Tube (Upper)
2	CPS01.02	Leg Tube (Lower Central)
3	CPS01.03	Leg Tube (Lower Corner)
4	CPS01.04	Rafter Tube
5	CPS01.05	Horizontal Tube
6	CPS01.06	Cross Rail (Lower)
7	CPS01.07	3-Way Peak Connector
8	CPS01.08	4-Way Peak Connector
9	CPS01.09	3-Way Connector (Left Side)
10	CPS01.10	3-Way Connector - (Right Side)
11	CPS01.11	4-Way Side Connector
12	CPS01.12	4-Way Cover Rail Clamp
13	CPS01.13	Corner Leg (Angled)
14	CPS01.14	3-Way Cover Rail Clamp

Item	Part No.	Description
15	CPS01.15	15" Anchor
16	CPS01.16	Foot Plate
17	CPS01.17	Cable Clamps
18	CPS01.18	Cable 12"
27	CPS01.27	Ratchet Hook
--	CPS01.19	Retaining Pin (Not Shown)
--	CPS01.20	Split Pin (Not Shown)
--	CBN645.S	Coach Bolt M6 x 45mm (Not Shown)
--	FWM6.S	Flat Washer M6 (Not Shown)
--	NLN6.S	Nyloc Nut M6 (Not Shown)
--	CPS01.24	Roof Tarpaulin (Not Shown)
--	CPS01.25	Door Panel (c/w zipper) (Not Shown)
--	CPS01.26	Back Panel (Not Shown)

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

**IMPORTANT:** No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.