



DELUXE STEEL CREEPER

MODEL NO: **SCR84.V2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection

1. SAFETY

- WARNING!** Ensure health & safety, local authority and general workshop practice regulations are strictly adhered to when using this equipment.
- ✓ Familiarise yourself with product application and limitations, as well as the specific potential hazards peculiar to this product.
- ✓ Maintain creeper in good condition. Use an authorised service agent.
- ✓ Replace or repair damaged parts. Use only genuine parts only. Non authorised parts will invalidate warranty.
- WARNING!** Use the creeper on level and solid ground, preferably concrete.
- ✗ **DO NOT** use the creeper for any purpose other than that for which is designed.
- ✗ **DO NOT** stand on the creeper.
- ✗ **DO NOT** get the creeper wet or use in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** clean the creeper with any solvents which may damage the paint surface or padded areas.

2. INTRODUCTION

Heavy-duty steel framework with powder coat paint finish. Easy-rolling Ø75mm swivel composite castors. Vinyl covered back and headrest. Designed for the professional workshop.

3. SPECIFICATION

Model no: SCR84.V2
Capacity: 180kg
Size: (L x W x H) 1135 x 510 x 185mm
Wheels: 6

4. ASSEMBLY

Refer to Parts List attached

4.1. ATTACH THE HEADREST SUPPORT BAR

- 4.1.1. Position the headrest support bar within the main frame (5). Fit the top two castors (7) through main and headrest frames, and secure with spring washer (6) and castor wheel nut (5).

4.2. ATTACH THE HEADREST

- 4.2.1. Screw the headrest cushion (1) onto the headrest frame using four cross head screws (3) from underneath.

4.3. ATTACH THE REMAINING 4 CASTOR WHEELS

- 4.3.1. Fix the remaining 4 castor wheels to the creeper frame using castor wheel nuts (5).

5. MAINTENANCE

- 5.1. Before each use inspect the overall condition of the creeper for broken, cracked or bent parts that may effect the proper operation.

6. OPERATION

- WARNING!** If you raise the vehicle to work under it, set the vehicle on jack stands.
 - ✗ **DO NOT** work under a vehicle raised on a jack(s).
 - ✓ If the vehicle is on the ground, block the tyres, apply the handbrake and put it into gear or Park mode.
- 6.1. As you slide under the vehicle and prior to sliding out on the creeper, keep your head flat on the headrest.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk