



12" OSCILLATING DESK TOWER FAN 2-SPEED

MODEL NO: **STF12C**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Indoor use
only



Do not cover

1. SAFETY

1.1. ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:


Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey Stockist.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
 - × **DO NOT** pull or carry the appliance by the power cable.
 - × **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
 - × **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.
 - If the cable or plug is damaged during use, switch the electricity supply and remove from use. Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician. Class II products are wired with live (brown) and neutral (blue) only, and are marked with the Class II symbol;
 - A) Connect the BROWN live wire to the live terminal 'L'.
 - B) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.
 - × Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
 - × **DO NOT** connect either wire to the earth terminal.

Sealey recommend that repairs are carried out by a qualified electrician.

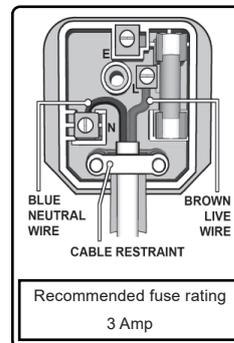

1.2. GENERAL SAFETY

- 1.3. Disconnect the fan from the mains power when not in use and before servicing or performing any maintenance.
 - ✓ Use the fan in dry areas only.
 - × **DO NOT** use in wet or areas with high condensation such as showers, pools etc.
 - × **DO NOT** immerse the fan in water or any other liquid.
 - **WARNING!** If the fan falls into water or any other liquid, immediately disconnect from the mains power supply. **DO NOT** touch the fan until the mains power supply has been disconnected.
 - ✓ Always disconnect the fan from the power supply when moving it from one location to another.
 - ✓ Ensure the fan is stood on a level surface.
 - ✓ Before use ensure that there is nothing nearby that will be damaged or displaced by the stream of air.
 - ✓ Keep the fan clean and maintained in good condition. For motor service contact an authorised Sealeys service agent.
 - ✓ Use recommended parts only. Unapproved parts may be dangerous, and will invalidate your warranty.
 - × **DO NOT** operate the fan where there are explosive or flammable gases, fumes or other hazardous substances.
 - × **DO NOT** place the fan near an open flame, cooking or other heating appliances.
 - × **DO NOT** stand the fan on the power cable.
 - × **DO NOT** insert any objects through the fan guard.
 - × **DO NOT** cover the fan when in use.
 - × **DO NOT** run the power cord under carpeting.
 - × **DO NOT** route the power cord under furniture or appliances.
 - ✓ Avoid trip hazards by arranging the power cord away from traffic areas.
 - × **DO NOT** allow children to operate the fan.
 - × **DO NOT** stand the fan where it may be knocked over or off a surface.
 - × **DO NOT** use the fan outdoors, for household use only.


- ✘ **DO NOT** modify speed control or attempt to fit any additional external speed control device to the fan.
NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- ✓ Children should be supervised to ensure that they **DO NOT** play with the appliance.

2. INTRODUCTION

Slimline fan design ideal for desktop use. Matte finish with two speed and oscillating functions. Smooth running highly durable copper motor powers fan blades and oscillating motor to aid powerful and even air distribution. Fitted with 3-pin plug.

3. SPECIFICATION

Model No:STF12C
 Power:..... 18W
 Speeds:..... 2
 Supply:.....230V
 Maximum Flow Rate (F):..... 1.41m³/min
 Fan Power Input (P):..... 14.8W
 Service Value (SV):..... 0.1 (m³/min)/W
 Standby Power Consumption (Psb):0.0W
 Seasonal Electrical Consumption (Q): 5.8kWh/a
 Fan Sound Power Level (Lwa):..... 50dB(A)
 Maximum Air Velocity (c):..... 0.84m/s

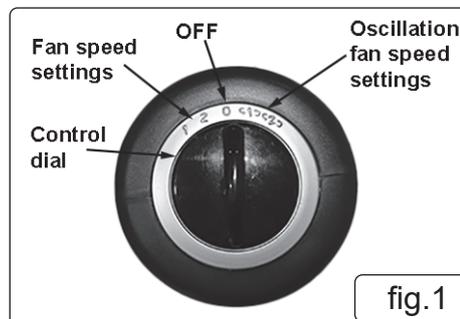

4. OPERATION

NOTE: Ensure all Safety Instructions in Section 1 are read and fully understood and carried out before use and save the instructions and warning for future reference.

4.1. FAN FUNCTION

- 4.1.1. To operate the fan, turn the control dial, from the **0** position, counterclockwise to the desired speed (fig 1).
0 = Off
2 = High speed
1 = Low speed

4.2. OSCILLATION FUNCTION

- 4.2.1. To operate the oscillation function, turn the control dial, from the **0** position, clockwise to the desired oscillation speed (fig 1).
0 = Off
1 = Low speed with oscillation
2 = High speed with oscillation

5. MAINTENANCE

- ☐ **WARNING!** Ensure that the fan is turned off and disconnected from the mains power supply before attempting any of the following.
- 5.1. Should the motor, switch or the power lead require service or maintenance contact your local Sealey stockist.
- 5.2. When not in use store the fan in it's original packaging in a safe, dry, dust free childproof location.
- 5.3. **CLEANING**
- 5.3.1. Use a soft damp cloth to clean the fan.
- 5.3.2. Clean the inlet/outlet ribs with a vacuum cleaner or similar.
 - ✘ **DO NOT** disassemble for cleaning.
 - ✘ **DO NOT** immerse the fan in water and never allow any water to drip into the motor housing.
 - ✘ **DO NOT** use solvents, petroleum, paint thinner or other chemicals to clean the fan.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk