



5V 2A DOUBLE WIRELESS CHARGING BASE

MODEL NO: **WCB2**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

- ❑ **WARNING!** To reduce the risk of electric shock, burns or fire:
- ✗ **DO NOT** attempt to open, disassemble, modify or service the charging base.
- ✗ **DO NOT** crush, puncture, or dispose of in fire or water.
- ✗ **DO NOT** expose to temperatures above 60°C (140°F).
- ✓ Recycle or dispose of used charger as stipulated by local regulation.

2. INTRODUCTION

Double wireless charging base fitted with two strong magnets for attaching to a metal surface. Four holes at each corner for permanent fixture to non-metallic surface or wall. Charges both Model No's LEDWC01 and LEDWC02 Wireless Rechargeable Inspection Lamps. Supplied with USB charging cable and 5V 2A charging adaptor.

3. SPECIFICATION

Model No.:.....	WCB2.V1
Input voltage	5V 2A
Output (Wireless).....	5V 1A
Output (USB)	5V 1A

4. OPERATION

NOTE: The wireless charging pad is not compatible with other wireless devices / smart phones etc.

4.1. CHARGING TORCHES (fig.1)

- 4.1.1. If required, either place the charging base on a metallic surface using the magnets (on underside) to hold it in position or permanently fix it to a non-metallic surface or wall using the four 5mm diameter counter bored holes in each corner.
- 4.1.2. Connect charging base to wall socket using the cable and plug supplied. Turn on the power source and the LED on the top surface of the pad will light green indicating that the USB charging output is able to be used.
- 4.1.3. Place rear face of torch onto the front face of charge base ensuring alignment of charge pads and magnets.
- 4.1.4. The LED on the top surface of the pad will light red indicating that the USB charging output socket is not able to be used.
- 4.1.5. Once the torch indicates full charge, remove from base and disconnect base power supply.

5. MAINTENANCE

- 5.1. Keep the charging base clean by wiping with a slightly damp cloth.
- 5.2. Store charging base in a dry childproof area.

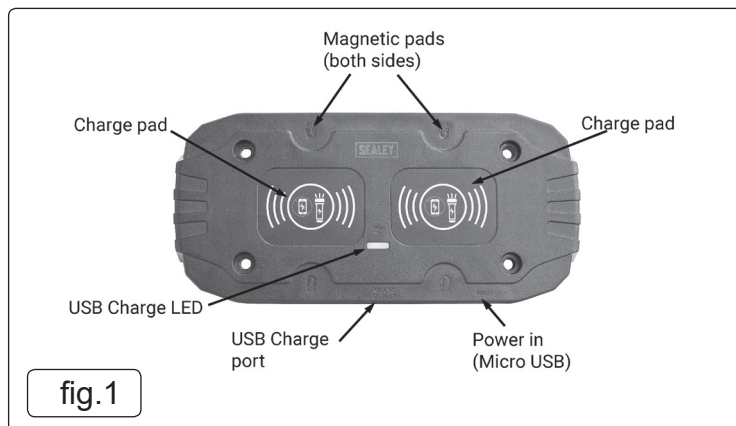


fig.1



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk