



Item	Part No.	Description
1	RE97XM05.01	Up-Hook
2	RE97XM05.02	Nut
3	RE97XM05.03	Hex Screw
4	RE97XM05.04	Ram
5	RE97XM05.05	Bushing
6	RE97XM05.06	Closing Ring
7	RE91-05.07	O-Ring, (Ex: 39.98 In: 32.92 Cs: 3.53)
8	RE97XM05.08	U-Type Packing
9	RE97XM05.09	Collar
10	RE97XM05.10	Nut
11	RE97XM05.11	Spring
12	RE97XM05.12	Shaft
13	RE97XM05.13	O-Ring & Seal
14	RE97XM05.14	Nut

Item	Part No.	Description
15	AK458DX.V4-13	O-Ring, (Ex: 51.10 In: 44.04 Cs: 3.53)
16	RE97XM05.16	Cylinder
17	RE97XM05.17	Down Hook
18	RE97XM05.18	Spindle Screw
19	RE97XM05.19	Spring
20	RE97XM05.20	Spindle
21	RE97XM05.21	Oil Ring
22	RE97XM05.22	Connection Nut
23	RE97XM05.23	Hose Coupler
24	RE97XM05.24	O-Ring, (Ex: 14.41 In: 9.53 Cs: 2.44)
25	RE97XM05.25	Dust Cap
--	RE97XM05.H-F	Hook Female for RE97XM05 5 Tonne (Not Shown)
--	RE97XM05.H-M	Hook Male for RE97XM05 5 Tonne (Not Shown)

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

**IMPORTANT:** No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.