



INSTRUCTIONS FOR:

ENGINE OIL FUNNEL - BMW, FIAT, FORD, MAZDA, MERCEDES, TOYOTA/LEXUS, VAG,- 4pc

MODEL No: **VS7101**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- ☐ **WARNING!** *Ensure Health and Safety, local authority and general workshop practice regulations are adhered to when using tools.*
- × **DO NOT** use tools if damaged.
- ✓ Maintain tools in a good, clean condition for best and safest performance.
- ✓ Wear approved eye protection. A full range of personal safety equipment is available from your Sealey dealer.
- ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear jewellery and tie back long hair.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ When not in use, store in a secure, childproof location.

2. INTRODUCTION

A new design of funnel that fastens and seals into the engine filler with four manufacturer specific adaptors. Covering a large proportion of modern vehicles including the VAG range, Fiat 500 0.9litre MultiAir and Fiesta 1.0litre EcoBoost. Hands free operation with no mess or spills.

3. APPLICATIONS

Vehicle Applications: Adaptors 1 & 2

Make	Model	Year	Make	Model	Year
Audi	A3	2006-2012	Lexus	LS460, RX350	2007-2012
Audi	A4	1996-2008	Lexus	LS600h	2008-2012
Audi	A4 Quattro	1996-2009	Lexus	LX450	1996-1997
Audi	A5 Quattro	2008	Lexus	LX470	1998-2001, 2006
Audi	A6 Quattro	1995-2011	Lexus	LX570	2008-2011
Audi	A8	1997-1999	Lexus	RX300	1999-2006
Audi	A8 Quattro	1997-2012	Lexus	RX400h	2006-2008
Audi	Allroad Quattro	2001-2005	Lexus	SC430	2008-2010
Audi	Q7	2007-2010	Mercedes	E320	1996-2005
Audi	R8	2008	Mercedes	ML320	1998-2000
Audi	RS4	2007-2008	Mercedes	S320	1996-1999
Audi	RS6	2003	Mercedes	S500, SL500	1997-1999
Audi	S4	1992-2008	Mercedes	S600	1997-2002
Audi	S6	1995-2003	Mercedes	SL320	1996-1997
Audi	S8	2001-2009	Mercedes	SL600	1997-1999
Audi	TT	2000-2009	Mercedes	SLK230	1998-1999
Audi	TT Quattro	2004-2012	Porsche	Cayenne	2006-on
BMW	318i	1984-1996	Scion	tC	2005-2007
BMW	318is	1991-1997	Scion	xB	2012
BMW	318ti	1995-1999	Scion	xD	2008-2011
BMW	323i	1999-2002	Toyota	4Runner	1993-2011
BMW	325Ci	2001-2004	Toyota	Avalon	2005-2009
BMW	325i	1987-2005	Toyota	Camry	1983-2012
BMW	325is	1987-1991	Toyota	Celica	1983-2005
BMW	328i, 328is	1996	Toyota	Corolla	2003-2011
BMW	330i, 330Ci	2001-2004	Toyota	Echo	2000-2002
BMW	540i	1997-2002	Toyota	FJ Cruiser	2007-2012
BMW	545i	2004	Toyota	Highlander	2001-2012
BMW	740i, 740iL	1993-1999	Toyota	Land Cruiser	1972-2010
BMW	745i, 745Li	2002-2004	Toyota	Matrix, Yaris	2010-2011
BMW	750iL	1988-2001	Toyota	MR2 Spyder	2004
BMW	760i, 760Li	2003-2004	Toyota	Prius	2006
BMW	X3	2004	Toyota	RAV4	2005-2011
BMW	X5	2001-2004	Toyota	Sequoia	2004-2010
BMW	Z3	1996-2002	Toyota	Sienna	1998-2006, 2008-2010
BMW	Z4	2003-2004	Toyota	Solara	2000-2008
BMW	Z8	2000	Toyota	Supra	1997-1998
Lexus	CT200h	2011-2012	Toyota	Tacoma	1995-2010
Lexus	ES300	2000-2006	Toyota	Tundra	2004-2011
Lexus	ES350	2007-2008, 2012	Toyota	Venza	2009-2011
Lexus	GS350, GS450h	2009-2011	VW	Beetle	1973-2010
Lexus	GS430, GS300	2006	VW	CC	2009-2012
Lexus	GS460, RX450h	2010-2012	VW	Eos	2007-2008
Lexus	GX470	2008-2009	VW	EuroVan	1999-2003
Lexus	HS250h	2010-2011	VW	Fox	2006-2007
Lexus	IS250	2007-2010	VW	Golf	1983-2010
Lexus	IS250	2006	VW	Passat	2004-2006
Lexus	IS350	2006-2012	VW	Touareg	2004-2012

Vehicle Applications: Adaptor 3


Mazda	MX-5	2006-2010
Mazda	RX-8	2009-2011
Mazda	Tribute	2005-2011
Mazda	3	2004-2009
Mazda	5	2006-2009
Mazda	6	2004-2010
Mercury	Mariner	2006-2008
Mercury	Milan	2006-2009
Ford	Escape	2004-2008
Ford	Focus	2004-2011
Ford	Fusion	2005-2008
Ford	Ranger	2004-2011
FordFiesta	1ltr 3cyl eco boost	2012-on

Vehicle Applications: Adaptor 4

Fiat	500 .9ltr	2008-On
Fiat	Punto	2003-2005

4. INSTRUCTIONS

Locate and remove oil filler cap (if unsure, consult vehicle handbook for location) and lock VS7101 funnel in place using the appropriate adaptors.

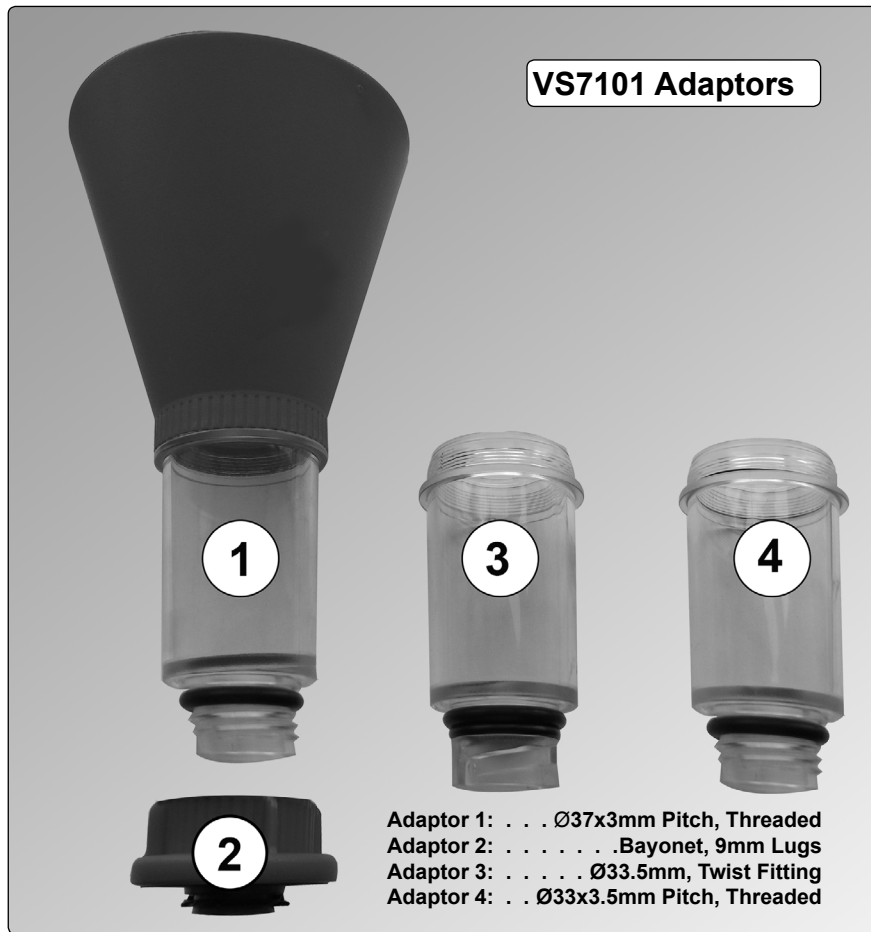

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
 Kempson Way, Suffolk Business Park,
 Bury St. Edmunds, Suffolk,
 IP32 7AR

01284 757500



www.sealey.co.uk

01284 703534



sales@sealey.co.uk