

TOUCH-UP PAINT APPLICATION GUIDE



EASY TO FOLLOW
STEPS



PROFESSIONAL
RESULTS



SAVE TIME &
MONEY



**A QUICK
STEP-BY-STEP
PDF FOR REPAIRING
SMALL SCRATCHES WITH
OUR COLORTOUCH BOTTLES**



BEFORE YOU START



BEST CONDITIONS



WORK IN A WARM,
DRY AREA



ENSURE GOOD
VENTILATION



AVOID DIRECT
SUNLIGHT



USE SUITABLE
PROTECTION



SUITABLE REPAIRS

STONECHIPS

LIGHT SCRATCHES

SCUFFS

SMALL PAINT
DAMAGE

SMALL RUST
SPOTS

WHAT YOU'LL NEED*



TOUCH-UP
PAINT



PRIMER



CLEAR
LACQUER



POLISHING
COMPOUND



MASKING
TAPE



SOFT-BACK SANDING
PAD & SURFACE PREP
WIPE




MICROFIBRE
CLOTH



THIS GUIDE IS DESIGNED FOR LIGHT SCRATCHES, DEEPER SCRATCHES OR LOCALISED DAMAGE. FOR MAJOR ACCIDENT DAMAGE, LARGE RUST AREAS, OR ANYTHING THAT MAY INVOLVE STRUCTURAL DAMAGE, A PROFESSIONAL REPAIR IS THE SAFER OPTION.

THE REPAIR PROCESS


1

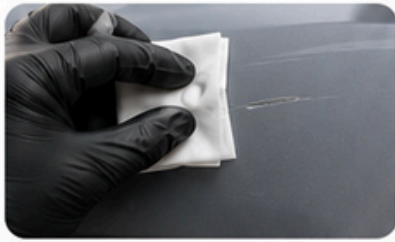

CLEAN & PREPARE

CLEAN THE AREA THOROUGHLY USING THE SURFACE PREP WIPE. THIS ALLOWS FOR BETTER ADHESION.

2

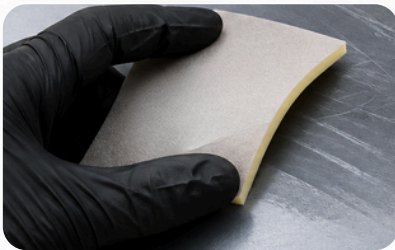

SAND & SMOOTH

USE THE SOFT-BACK SANDING PAD TO LIGHTLY SAND DAMAGED AREA. USE TACK CLOTH TO WIPE AWAY ANY DEBRIS.

3




APPLY GREY PRIMER

APPLY 1-2 COATS OF PRIMER USING THE BRUSH IN THE LID. LEAVE TO DRY 30 MINS BEFORE NEXT STEP.

🕒 10-15 MINUTES BETWEEN COATS

4

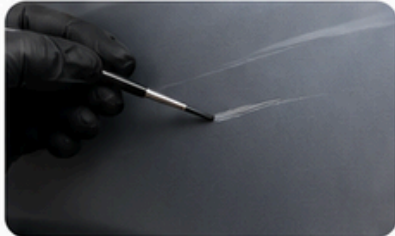


APPLY TOUCH-UP COLOUR

SHAKE THE TOUCH-UP COLOUR WELL. APPLY 1-2 COATS. LEAVE TO DRY 30 MINS BEFORE NEXT STEP.

🕒 10-15 MINUTES BETWEEN COATS

5

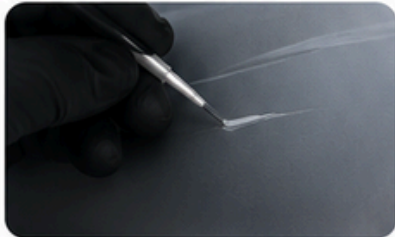

APPLY CLEAR LACQUER

SHAKE WELL & APPLY 1-2 COATS OF LACQUER. LEAVE TO DRY 30 MINS BEFORE NEXT STEP.

🕒 10-15 MINUTES BETWEEN COATS

6



POLISH & FINISH

ONCE FULLY DRY, USE THE MICROFIBRE CLOTH WITH THE POLISHING COMPOUND TO GENTLY POLISH THE AREA.



THIS IS INTENDED AS A GENERAL PRACTICAL GUIDE. RESULTS WILL DEPEND ON THE CONDITION OF THE DAMAGE, THE PRODUCTS USED & HOW CAREFULLY EACH STAGE IS CARRIED OUT.



PRO TIPS



AVOID THESE MISTAKES



BUILD THIN COATS

THIN COATS GIVE A SMOOTHER FINISH & PREVENT RUNS



PAINTING IN COLD WEATHER

LOW TEMPERATURES AFFECT ADHESION & DRYING



BE PATIENT

FOLLOW DRYING TIMES FOR LONGER LASTING RESULTS



SKIPPING PRIMER

PRIMER HELPS PAINT STICK & PREVENT FUTURE ISSUES



KEEP IT CLEAN

A CLEAN SURFACE IS KEY TO A PROFESSIONAL FINISH



TOUCHING THE PAINT

AVOID TOUCHING THE AREA UNTIL FULLY CURED

SAFETY PRECAUTIONS



WEAR GLOVES



EYE PROTECTION



DUST MASK



WELL VENTILATED



KEEP AWAY FROM FLAMES

FOLLOW US



SCAN QR CODE FOR WEBSITE



SOUTH DUBLIN

UNIT 1 WESTLINK INDUSTRIAL ESTATE,
KYLEMORE ROAD,
D10PN34

NORTH DUBLIN

UNIT C7 SANTRY BUSINESS PARK, SWORDS ROAD,
TURNAPIN GREAT,
D09AX86

OPENING HOURS

MON-THURS: 8:30AM - 5:30PM
(OPEN THROUGH LUNCH)

FRI: 8:30AM - 3:00PM
(OPEN THROUGH LUNCH)