



FOLDING PANEL STAND

MODEL NO: MK50.V3

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- ✓ Familiarise yourself with the application, limitations and hazards of the panel stand.
- ✓ Maintain the panel stand in good condition (use authorised replacement parts).
- ✓ Keep the panel stand clean for best and safest performance.
- ✓ Locate the panel stand in a suitable work area.
- ❑ **WARNING!** Use the panel stand on level and solid ground, preferably concrete.
- ✗ **DO NOT** exceed the safe working load of 200kg (using 4 links of the chain).
- ✗ **DO NOT** overload the panel stand.
- ✗ **DO NOT** climb on the panel stand.
- ✗ **DO NOT** use the panel stand for any purpose other than for which it is designed.
- ✗ **DO NOT** use the panel stand if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✓ Keep the work area clean, uncluttered and ensure that there is adequate lighting.
- ✓ Keep children and unauthorised persons away from the work area.
- ❑ **WARNING!** The warnings, cautions and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

2. INTRODUCTION

Versatile stand suitable for a wide variety of body shop applications. Work height is fully adjustable by lengthening chains. Foam cushioned supports help prevent marking panel.

3. SPECIFICATION

Model No MK50.V3
 Width 1000mm
 Folded Height 1100mm

4. ASSEMBLY

Refer to parts list.

- 4.1. Push rubber feet on to ends of legs as shown.
 - 4.2. Slide legs fig.1.1 into panel supports fig.1.2 and fix using hook bolts fig.1.3 as shown.
 - 4.3. Bolt the two halves of the stand together using the bolts / nuts / washers supplied. Ensure hooks face inwards.
 - 4.4. Suspend the chains between the hooks as shown to obtain required height.
 - 4.5. Panel stand can be folded up when not in use for ease of storage.
- ❑ **WARNING!** Take care not to trap fingers.

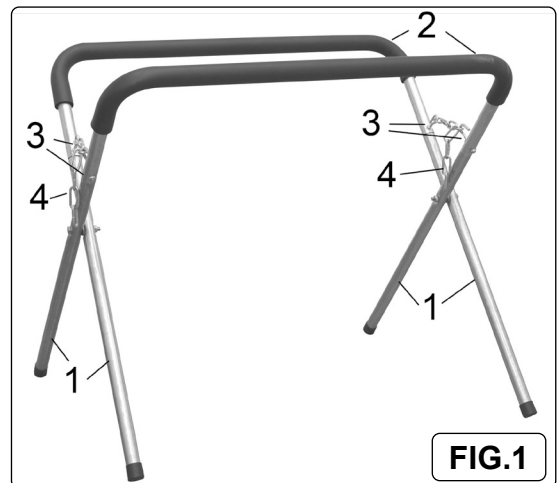


FIG.1



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk