



0.5 TONNE LOW PROFILE ENGINE CRANE

MODEL NO: PH5

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear protective gloves



Wear safety footwear

1. SAFETY

- ✓ Keep crane, lifting slings, support and beams in good working order and condition. Follow the inspection requirements as described in Section 6 Maintenance. Take immediate action to repair or replace damaged parts by contacting your supplier. Ensure that all accessory lifting devices are suitably certified. If crane is damaged, remove from service immediately.
- ✓ Ensure the surface on which the crane is used is level, firm and capable of supporting the weight of the crane with maximum load - we recommend concrete. Never use the crane on tarmac or other soft surfaces.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Keep working area clean and tidy, free from unrelated materials and ensure that there is adequate lighting.
- ✓ Ensure that load does not exceed the maximum lifting capacity of the crane. Overloading the crane is dangerous. Where appropriate, use only the lifting points recommended by the manufacturer of the item to be lifted, e.g. vehicle engine.
- ✓ Before lifting the load ensure that the crane jib is in the lowest practical position, that there are no obstacles which may snag the load whilst it is being lifted and that the area above the jib is clear.
- ✓ To avoid injury, be fully aware of your own and other persons locations in relation to the lifting, and lowering, of the load.
- ✓ Keep a sound footing and balance, and ensure the floor is not slippery.
- ✓ Ensure jib extension locking bolt and nut are in position before lifting.
- ✓ Ensure the centre of gravity always remains inside the crane base and is as close as possible to the vertical portion of the lifting member as possible.
- ✗ **DO NOT** harness the load at an angle or use any attachments not verified as fit for purpose.
- ✗ **DO NOT** allow the load to swing during lifting.
- ✗ **DO NOT** allow the load to drop suddenly. Lower load with care, ensuring that you are fully aware of the condition of the surface onto which the load is to be placed.
- ✗ **DO NOT** load crane beyond its rated capacity for each specified jib extension position as indicated in Section 3. The capacity of the crane reduces as the jib is extended.
- ✗ **DO NOT** position any part of your body beneath the load.
- ✗ **DO NOT** use the crane to move or transport a load other than for repositioning. The crane is a lifting device only.
- ✗ **DO NOT** apply any sideways pressure to any part of the crane during lifting or when a load is suspended.
- ✗ **DO NOT** attempt to adjust the safety valve, which has been set and sealed by the manufacturer.
- ✗ **DO NOT** use this product to perform a task for which it is not designed.
- ✗ **DO NOT** use whilst under the influence of drugs, alcohol or intoxicating medication.
- ✗ **DO NOT** attempt to modify or alter this unit.
- ✗ **DO NOT** climb on the crane.
- ✓ When not in use fold the crane down and store in a safe, dry, childproof area.
- ✓ This crane is designed for lifting within a garage or workshop environment.
- ☐ **WARNING!** Failure to heed safety and warning instructions may result in damage and/or personal injury and will invalidate the warranty.

2. INTRODUCTION

Low entry engine crane with a height of only 100mm at the wheels. Weighs only 37kg so is extremely lightweight and manoeuvrable. Heavy-duty castors and pump access from side, for safe handling of loads. Delivered in knock-down form to reduce freight costs, some self-assembly required.

2.1. IDENTIFICATION:


Supplier: Sealey Power Products,
Kempson Way,
Suffolk Business Park,
Bury St Edmunds,
Suffolk,
IP32 7AR.

Model No: PH5

3. SPECIFICATION

TECHNICAL DATA

Model No:	PH5
Height Jib Down:	1330mm
Height of Frame	100mm
Rear Width:	550mm
Width Front Frame:	800mm
Width Inside Front Frame:	700mm
Rated Capacity	
Lifting Capacity in Position 1:	500kg
Lifting Capacity in Position 2:	400kg
Lifting Capacity in Position 3:	300kg
Lifting Capacity in Position 4:	200kg
Lifting Capacity in Position 5:	n/a
Length:	1210mm
Length of jib in Position 1:	750mm
Length of jib in Position 2:	860mm
Length of jib in Position 3:	980mm
Length of jib in Position 4:	1100mm
Length of jib in Position 5:	n/a
Max. Lift Ht at Jib Position1:	1950mm
Max. Lift Ht at Jib Position2:	2050mm
Max. Lift Ht at Jib Position3:	2150mm
Max. Lift Ht at Jib Position4:	2250mm
Max. Lift Ht at Jib Position5:	n/a

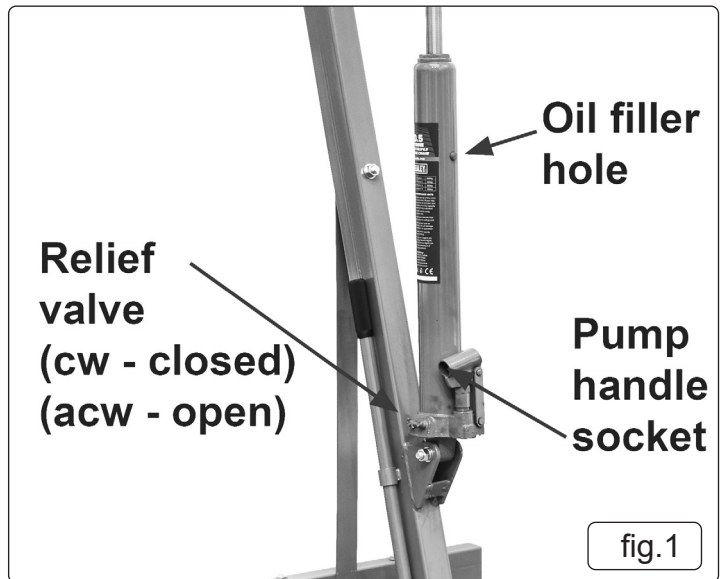

- For a description of in-service and out-of-service conditions see Section 1 Safety, Section 6 Maintenance.
- 3.1.1. For applications see Section 1 Safety.
 - 3.1.2. For control system, see fig.1 for relief valve, and pump arrangement. Operation is explained in Section 5.
 - 3.1.3. For ground condition requirements, see Section 1 Safety.
- For information on parts and materials requiring specialised repair techniques see Section 6 Maintenance.

4. ASSEMBLY

- WARNING!** It takes two people to build the crane. Leave all nuts loose until assembly is complete.
- NOTE:** Item numbers refer to attached parts diagram. Unpack and check against parts lists.
- 4.1. Assemble base elements (1, 2, 3, 4, 5, 11 and 12) using fixings shown.
 - 4.2. Assemble upright (6) to base frame front base member (4).
 - 4.3. Assemble boom and boom extension (7, 8) to upright (6) using fixings shown.
 - 4.4. Fit hydraulic unit (10) starting at the lower mounting point using fixings shown.
 - 4.5. Hang hook and chain assembly (9) using fixing shown.
 - 4.6. Tighten all nuts and bolts.
 - 4.7. **BLEED HYDRAULIC SYSTEM:** Place the pump handle into the pump socket, ensure the relief valve is in the open position (fig.1) and pump the handle 10-15 times, through the full stroke, thus bleeding from the hydraulic system any air which may have entered the system during transit.

5. OPERATION

- 5.1. **OPERATION. (Refer to Section 6.2 (a) regarding inspection before each and every use).**
 - a) Ensure the relief valve is in the closed position (fig.1).
 - b) Place handle into pump socket and pump, the jib will raise. Continue to pump until the jib reaches the height at which the load can be secured.
 - c) Connect the crane hook to the load using a suitable **certified** sling or support beam. Ensure you are aware of the load weight, and check that it is within the capacity of the crane (at the jib extension you are using) and the sling or support beam. When removing engines ensure you know the weight to be lifted. Use only the lifting points recommended by the vehicle manufacturer.
 - d) Lift only from directly above the load. **WARNING! DO NOT LIFT THE LOAD AT AN ANGLE!**
 - e) To lower load, turn relief valve **VERY SLOWLY** anti-clockwise avoiding any sudden movement.
- WARNING! DO NOT** allow the load to drop suddenly.
- f) The crane is not a transportation device but may be used to reposition the load being worked on. To do so, lower load and jib with care, to the lowest possible point before attempting to move. **DO NOT** try to move crane in a sideways direction. The crane is not designed to support the load indefinitely. When you have repositioned the load, lower the load onto a secure and appropriate working base, being fully aware of your own and other persons locations in relation to the lowering load.
- g) When load has been secured, remove lifting sling, support beam etc. and place crane in a safe location with lifting beam fully lowered.

6. MAINTENANCE/INSPECTION

- NOTE:** The crane **MUST** be kept clean and dry and must be maintained in accordance with these instructions.
- 6.1. **LUBRICATION.**
 - a) Oil all working parts monthly.
 - b) The ram is filled with oil and should only require occasional topping up. For the occasional top up **DO NOT** use brake fluid, as this will damage the hydraulic seals. Proceed as follows:
 - 1) Use only good quality hydraulic jack oil available from your Sealey stockist.
 - 2) **DO NOT OVERFILL** as this will cause failure.
 - 3) Remove plug from oil filler hole and slowly add fluid a little at a time until the level of oil is 3 - 5mm below the hole.

4) After filling with hydraulic oil, replace plug, pump the crane up to its full height and drain off any excess oil.

6.2. INSPECTION AND EXAMINATION OF CRANE BEFORE USE

- a) Before each use of the crane, perform an inspection for leaks, damage, loose or missing parts.
- b) Ensure that the crane operates in a safe and reliable manner and is fit for purpose.
- b) The workshop crane must be examined immediately if it has been subject to an abnormal load or shock. It is recommended that such an examination is made by an authorised service agent.
- c) The owner and/or operator must be aware that repair of this equipment will require specialised knowledge and facilities. It is recommended that an annual examination of the workshop crane is made by an authorised service agent.
- d) Unauthorised parts may be dangerous and will invalidate the warranty.

6.3. DAMAGED CRANES

Any crane which appears to be damaged, badly worn, or operates abnormally **MUST BE REMOVED FROM SERVICE!** It is recommended that necessary repairs be made by an authorised service agent.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk